

## **INSTALLATION GUIDE**


# HEPA filter, 50584/50586 for DAN DRYER hand dryers BJÖRK, TURBO Low Noise & AirTap

#### Introduction:

This guide shows how to properply install a DAN DRYER HEPA filter 50584/50586.

#### Warning:

To achieve the best possible result, it is important that the filter's particle filter (green without ribs) is facing outward.

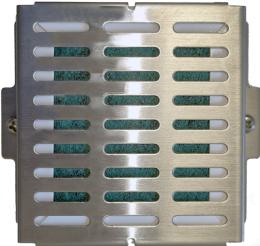





## **BJÖRK**



1. Locate the mounting holes on the foot of the dryer. Remove existing filter holder, if any, before the new unit can be installed.



2. Place the filter unit on the holes over the air inlet.



3. Fit and fully tighten the security screws on both sides.



4. Installation/replacement of the filter is now complete.



## **TURBO Low Noise**



1. Locate the mounting holes on the foot of the dryer. Remove existing filter holder, if any, before the new unit can be installed.



2. Place the filter unit on the holes over the air inlet.



3. Fit and fully tighten the security screws on both sides.



4. Installation/replacement of the filter is now complete.



# AirTap



1. Locate the mounting holes on the foot of the dryer. Remove existing filter holder, if any, before the new unit can be installed.



2. Place the filter unit on the holes over the air inlet.



3. Fit and fully tighten the security screws on both sides.



4. Installation/replacement of the filter is now complete.